


2 Boost

FOXROX
ELECTRONICS

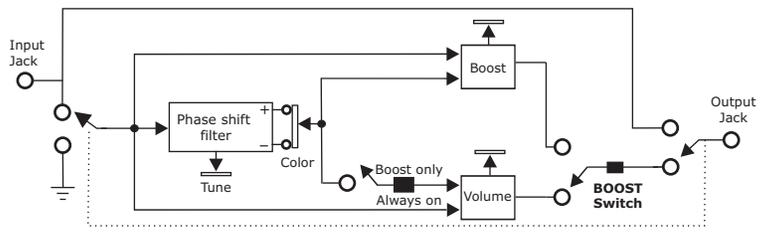


DIMENSIONS: Width 3" Depth 4.8" Height 2.85"
WEIGHT: 1.3 lbs. (without 9V battery)
VOLTAGE: 9-18 Volts DC (via battery or external power)
CURRENT DRAW: 30 mA
POWER CONNECTOR: 2.1 mm, Center Negative (FX Standard)

FOXROX
ELECTRONICS

2 Boost

Two levels of boost
Tunable phase shift filter

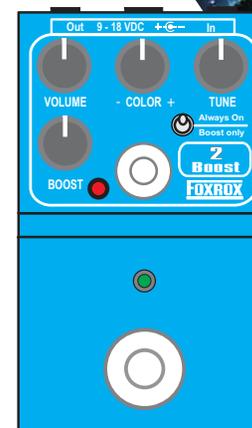

2Boost gives you two levels of adjustable clean boost, plus a phase shift filter that works as a powerful tone modifier.

Two Levels of Boost From unity to 14 dB of gain. When red BOOST LED is off, level is controlled by the VOLUME knob. When it's on, level is controlled by the BOOST knob. The phase shift filter can be applied to both VOLUME and BOOST or BOOST alone. The COLOR and TUNE settings can provide additional loudness or volume cut.

Phase Shift Filter The phase section is an extremely powerful tone shaping tool. It consists of 4 stages of static (not modulated) phase shift. TUNE sets the amount of shift and COLOR controls the intensity with Positive or Negative polarity, depending on the direction it's turned.

Ways You Can Use 2Boost

- Establish three selectable volume levels. You have your bypass level, the level you set with the VOLUME knob, and the level you set with the BOOST knob.
- At the start of your signal chain as an always-on buffer. Use the BOOST to drive your pedals or your amp harder.
- Use the phase shift filter for special effects or to make your leads stand out in the mix.

FOR MORE 2BOOST INFORMATION, VISIT WWW.FOXROXELECTRONICS.COM

FEATURES

VOLUME: Sets the volume level when the pedal is engaged without BOOST activated. Minimum setting is Unity Gain. At maximum, there is 14 dB of clean boost.

BOOST: Sets the volume level when the pedal is engaged and BOOST is activated (red LED is on). Minimum setting is Unity Gain. At maximum, there is 14 dB of clean boost.

TUNE: This determines the degree of phase shift created by the phase shift filter. Rotate clockwise to sweep from low to high frequencies.

COLOR: Sets the amount of coloration added by the phase shift filter. Counter-clockwise mixes it with negative polarity for a filtered sound. Clockwise mixes it with positive polarity for a phased sound. Set at center detent (12:00) for no coloration.

ALWAYS ON/BOOST ONLY: Phase shift filter settings TUNE and COLOR are normally applied to BOOST. This switch allows you to apply those settings to VOLUME as well.

BOOST SWITCH: Momentary foot switch toggles BOOST on and off. Indicated with red LED.

WARRANTY: Foxrox warranties this pedal for 5 years against failure. Parts and labor are covered. Warranty does not include damage due to improper voltage, extreme abuse and unauthorized modifications. For repair help, email service@foxroxelectronics.com.