


# OCTRON<sub>4</sub>

**FOXROX**  
ELECTRONICS

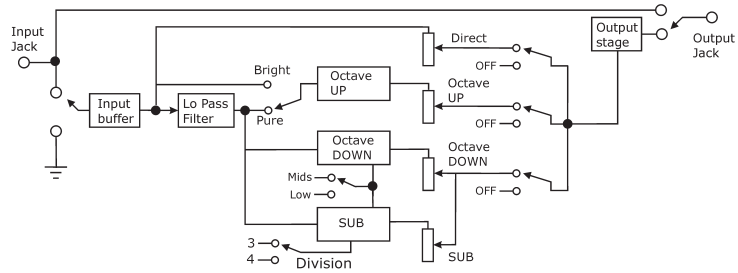


**DIMENSIONS:** Width 5.6" Depth 4.8" Height 2.85"  
**WEIGHT:** 1.8 lbs.  
**VOLTAGE:** 9-18 Volts DC External Power  
**CURRENT DRAW:** 100 mA  
**POWER CONNECTOR:** 2.1 mm, Center Negative (FX Standard)

**FOXROX**  
ELECTRONICS

# OCTRON<sub>4</sub>

**ANALOG OCTAVE  
Up and Down with  
Control Switches**

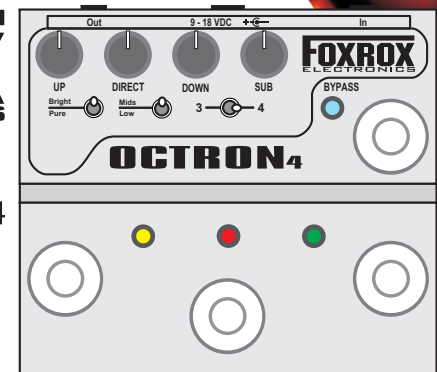

**OCTRON4** is an expanded version of the Foxrox Octron3 pedal. It has the same features with the addition of 3 foot switches for activating signals. The octave down section includes the ability to dial in sub-octave sounds.

OCTRON4 IS AN ANALOG OCTAVE PEDAL - NOT TO BE CONFUSED WITH A DIGITAL OCTAVE PEDAL.

**SWITCHING:** TRUE BYPASS is handled by the foot switch on the top level. Blue LED is lit up when activated.

**SIGNAL ACTIVATION SWITCHES:** The three lower foot switches control relays that turn the signals on and off and they correspond with the level controls.

**LEFT:** Octave UP. Yellow LED shows status.

**CENTER:** Direct. Red LED shows status.

**RIGHT:** Octave DOWN and SUB, combined. Green LED shows status.

**SUB:** Creates a note more than one octave below the note you play.

**DIVIDE by 4:** Two octaves below the note you play.

**DIVIDE by 3:** One octave, plus a fourth below the note you play. Play E, and you get a very low A.

FOR MORE OCTRON4 INFORMATION, VISIT [WWW.FOXROXELECTRONICS.COM](http://WWW.FOXROXELECTRONICS.COM)

## FEATURES

**DIRECT LEVEL:** Controls the level of the direct signal while the pedal is activated.

**OCTAVE UP LEVEL:** Controls the level of the Octave UP signal.

**BRIGHT/PURE SWITCH:** Selects between a bright sound, rich in harmonics, and a darker sound with a more pure upper octave.

**OCTAVE DOWN LEVEL:** Controls the level of the Octave DOWN.

**SUB LEVEL:** Controls level of SUB.

**SUB DIVIDE 3 / 4:** Select SUB for one and a half octaves down, or two octaves down.

**MIDS/LO SWITCH:** Selects between a mid-boost and a super-fat low end. Setting applies to both Octave DOWN and SUB signals.

**INPUT JACK:** 1/4" stereo jack. Disconnect Input to shut off battery.

**OUTPUT JACK:** 1/4" stereo jack. A stereo jack is used to maintain equal tension.

**WARRANTY:** FOXROX warranties this pedal for 5 years against failure. Parts and labor are covered. Warranty does not cover damage due to improper voltage and extreme abuse, and unauthorized modifications. For repair help, contact [service@FOXROXelectronics.com](mailto:service@FOXROXelectronics.com)